


REBAR QUANTITY  
RECORDER  
Quick User Manual

Version: 1.0

1. Click and run the .exe file.
2. After Installing the application Icon will appear on desktop. Double Click to Open the application.
3. Rebar Quantity Recorder main window.
4. Login Panel existing users can enter email ID/Password and login.
5. New users should register their email ID/Password by clicking Signup.  
[Note: Email IDs not ending in "@gmail.com" will not be accepted]
6. Click "Keep me logged in" checkbox to keep your user ID always logged in your current PC.
7. Click "Forget Password" if you don't remember your password, to create a new one by entering the generated OTP.

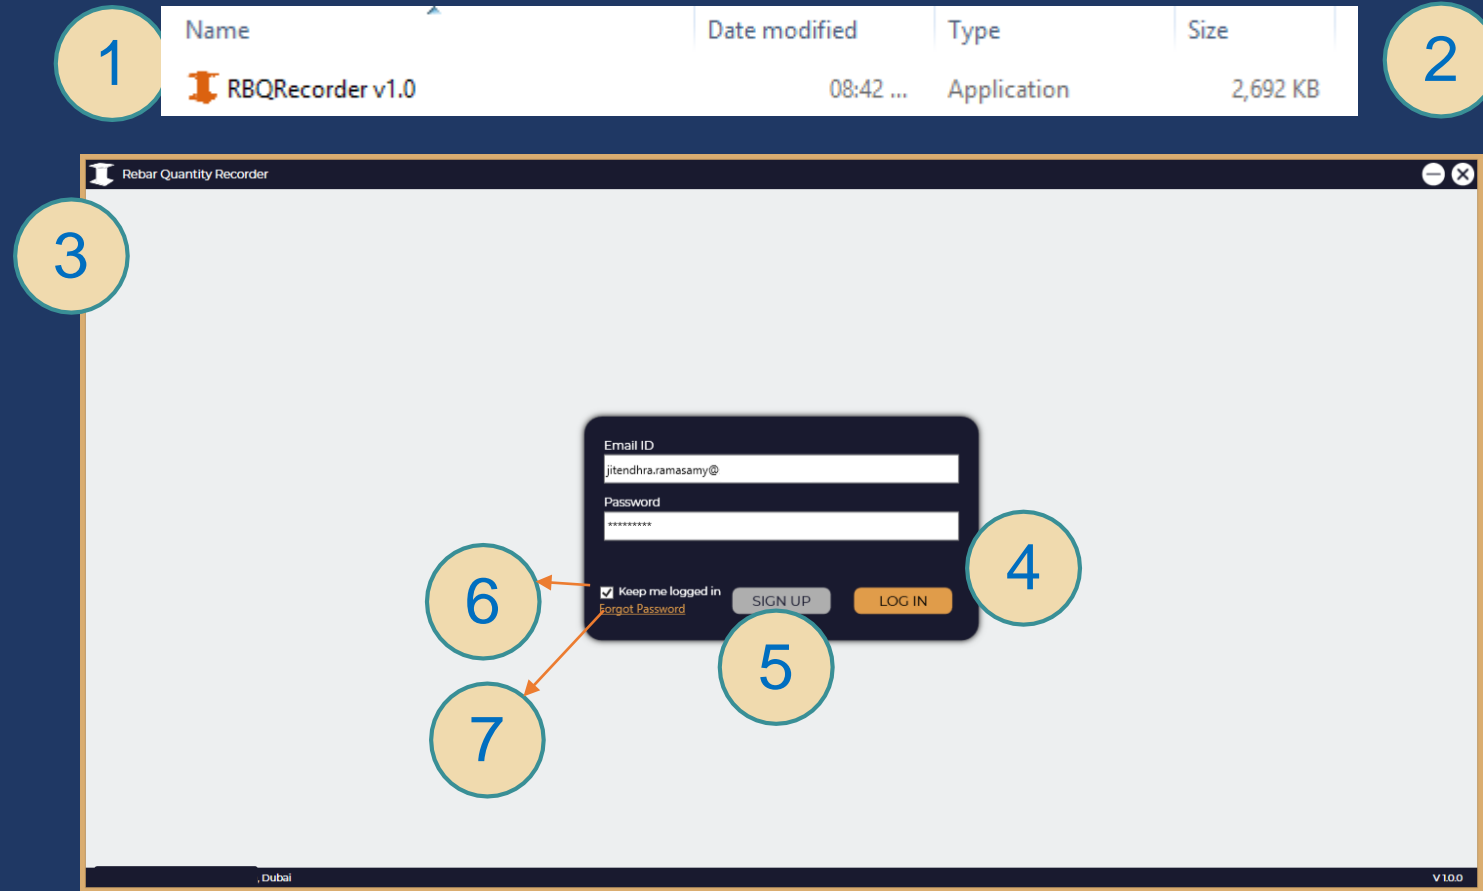

INSTALLATION & OVERVIEW

1

Email ID  
jitendhra.ramasamy@ n

Password  
Enter Password

Keep me logged in  
[Forgot Password](#)

SIGN UP LOG IN

2

First Name Last Name  
First name Last Name

Email ID  
jitendhra.ramasamy@ n

Password  
Enter Password

Confirm Password  
Enter Password

CANCEL REGISTER

3

Email ID  
jitendhra.ramasamy@ n

New Password  
Enter Password

Confirm Password  
Enter Password


OTP (One time password)  
Enter Reset OTP

Haven't received OTP email yet?  
[Request OTP](#)


CANCEL RESET

1. Login Panel
2. Register Panel
3. Forgot Password Panel

REGISTRATION & LOGIN

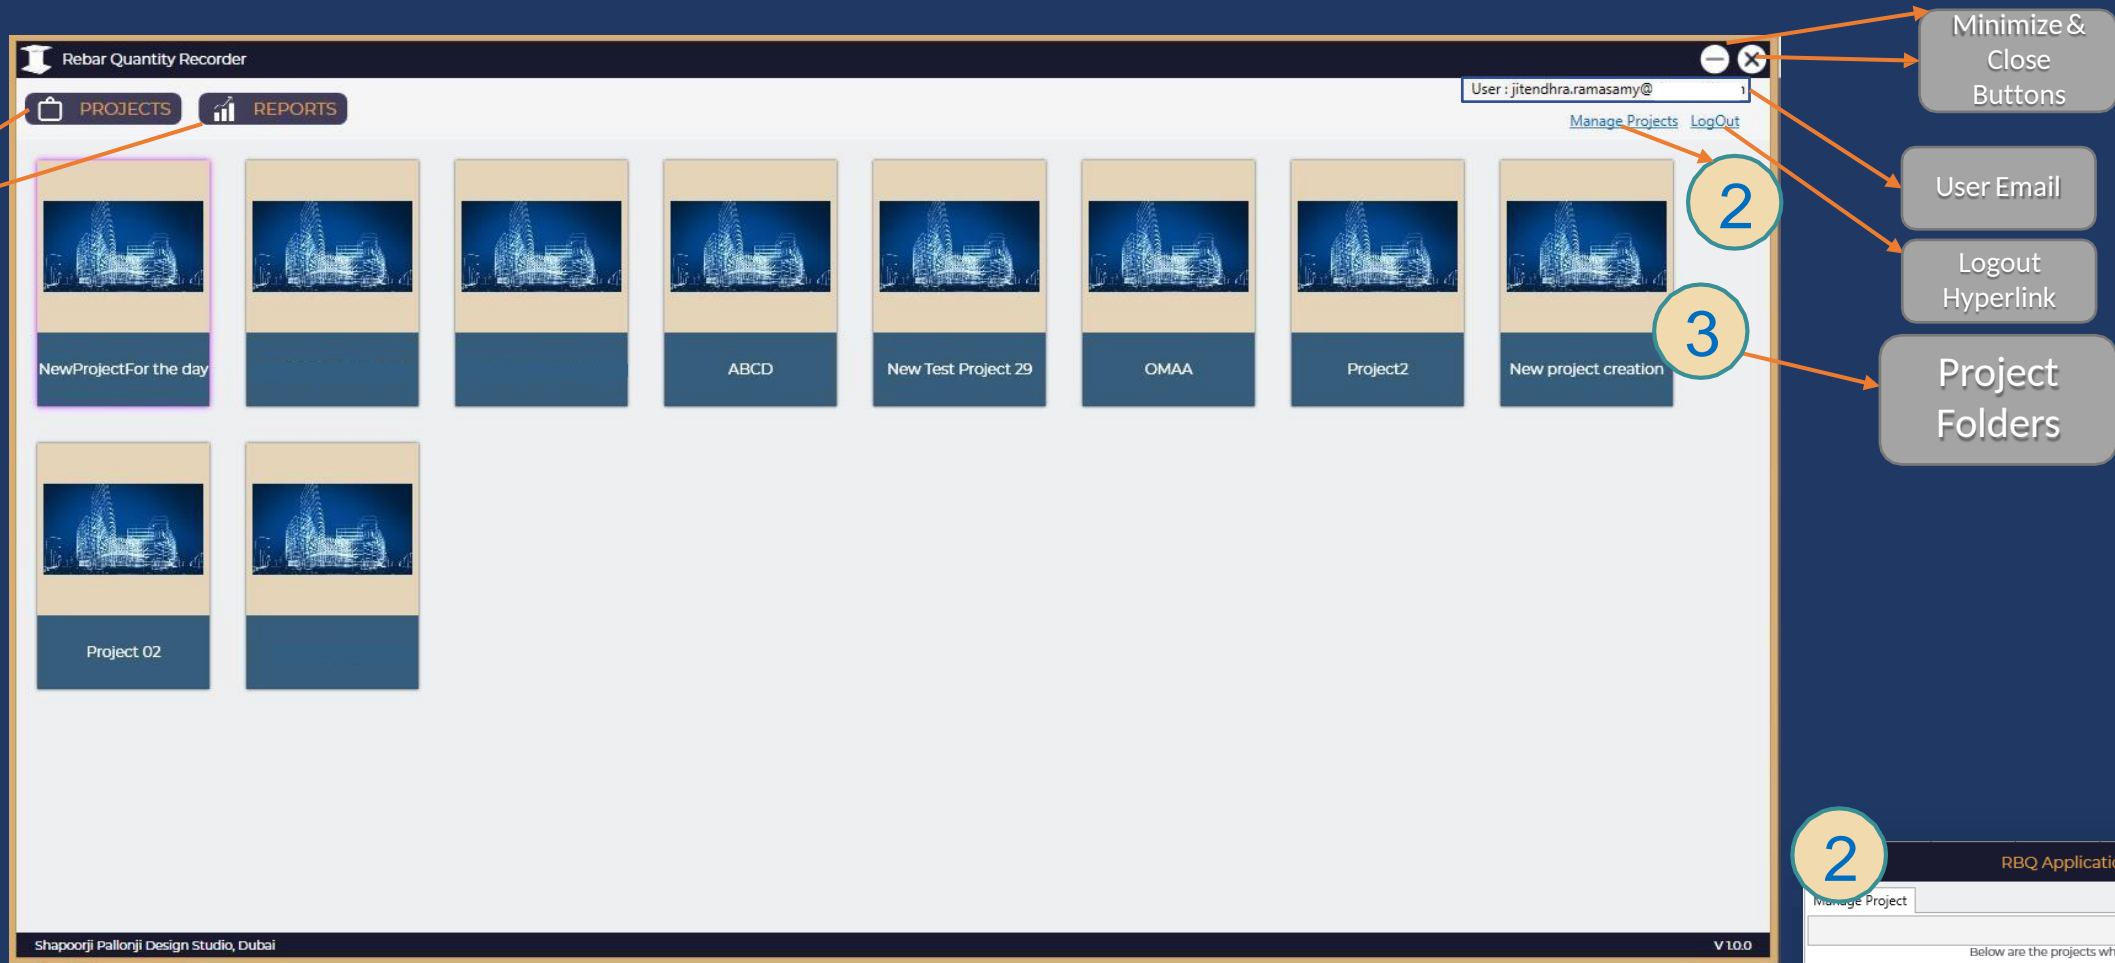

1. Tab menu for changing pages between Project and Report page.
2. "Manage Project" Dialog box for adding, editing and deleting Project Folder.
3. "Project Folder"- We have an Entry Page inside all the Folders.

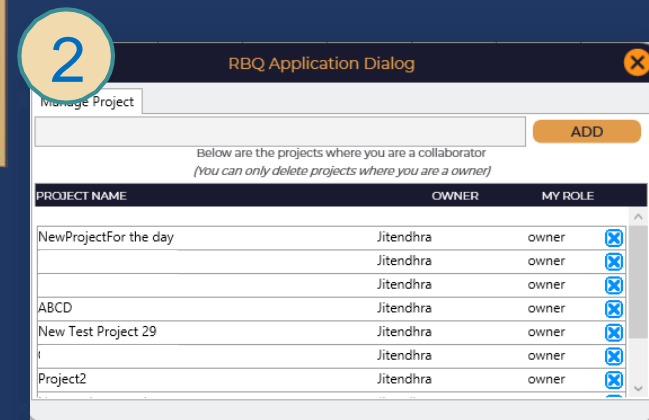

MAIN PAGE

2

Check Out Check In

PROJECTS REPORTS

PROJECT NAME: NewProjectFor the day

1

Settings

Manage Projects LogOut

User: jtendhra.ramasamy@it

Basement-3

Basement-2

Basement-1

Ground Floor

1st Floor

2nd Floor

3rd Floor

4th Floor

5th Floor

6th Floor

7th Floor

Shapoorji Pallonji Design Studio, Dubai

V1.0.0

3

RBQ Application Dialog

ADD HEADERS INVITE MEMBERS

ROWS COLUMNS COLUMN TYPES

ADD ADD ADD

Basement-3

Basement-2

Basement-1

Ground Floor

1st Floor

2nd Floor

3rd Floor

4th Floor

5th Floor

6th Floor

7th Floor

Basement-3

Basement-2

Basement-1

Ground Floor

1st Floor

2nd Floor

3rd Floor

4th Floor

5th Floor

6th Floor

7th Floor

Raft Foundation

Retaining Wall

Columns

Water-Tank Wall

Core-Wall

Shear-Wall

Ramp-Wall



Parapet-Wall

Tender


IFC

1. Entry page to add quantity of all Rebar quantity and sync with server.
2. Click "Check in" & "Check out" to Sync all data to cloud server and local
3. Click Settings button to open Dialog box for "Add Headers" & "Invite Members"

ENTRY PAGE

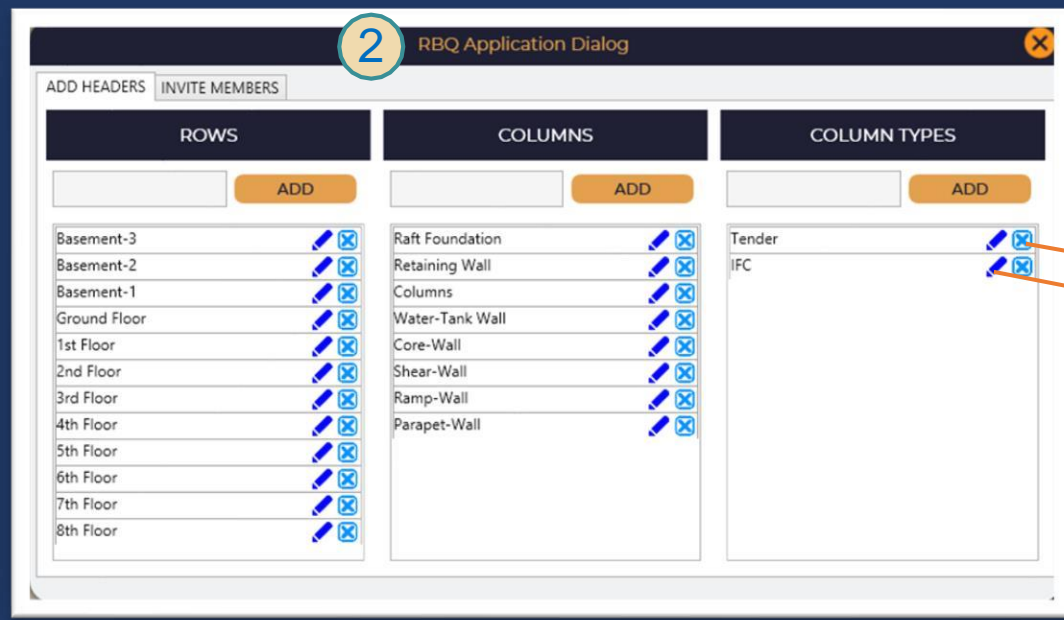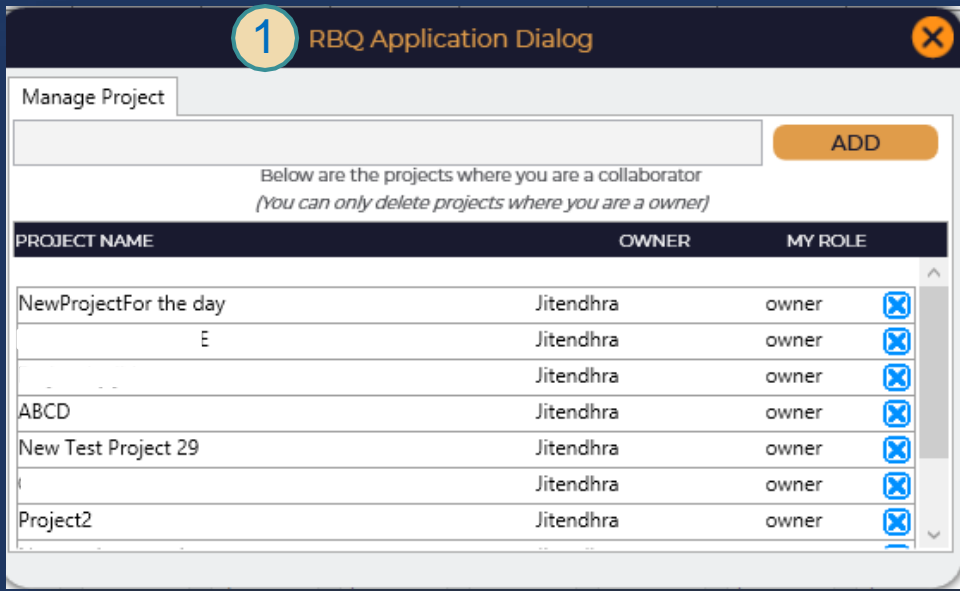

Edit & Delete Projects or Headers or Members

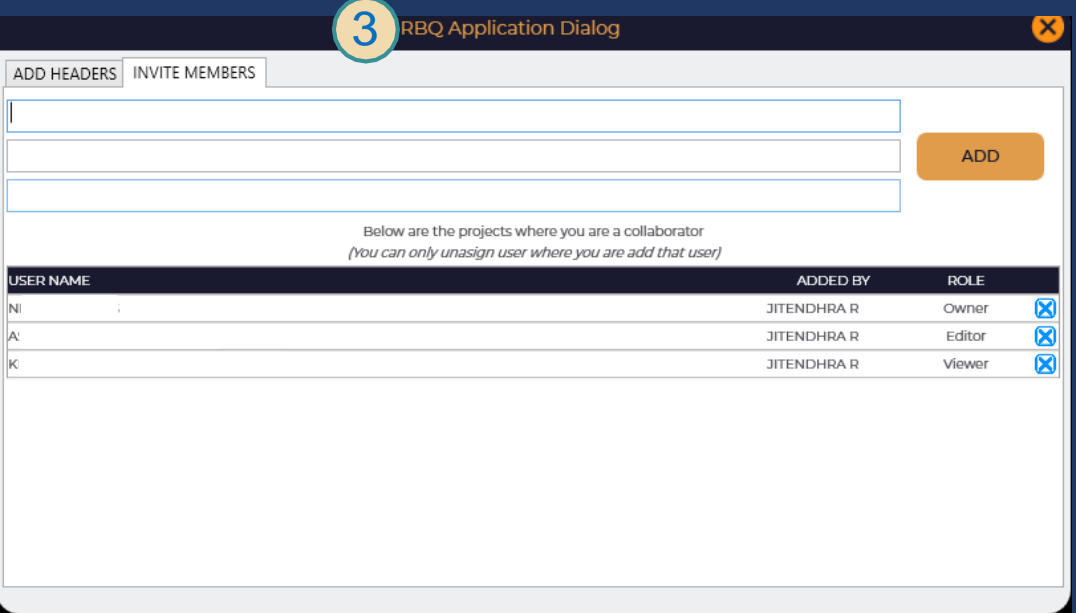

1. "Manage Project" Dialog control for managing all Project Details .
2. "Add Headers" Dialog control for adding row and column Headers in Entry sheet page
3. "Invite Members" Dialog control for adding new user to the current project.

Note: New user is added by project admin(One who created the project).

DIALOG CONTROLS